

# DOKOM CS Manual V3.0

14.Juni 2005

www.relay.de

info@relay.de

**DOKOM CS Manual** 

## Contents

INTRODUCTION	3
Doкoм CS About this manual	3 4
SYSTEM REQUIREMENTS	5
SUPPORTED READOUT TYPES PROGRAM STRUCTURE	6 8 8 9
DOKOM CS CONFIGURATION	.11
STRUCTURAL LAYOUT OF THE DOKOM CS	.14 .16 .23 .26 .29
DOKOM CS READING	.35
FUNCTIONS OF THE PROGRAM PART READING THE SCHEDULER THE WINDOW OF READOUTS CHANGES OF THE READOUT TASKS THE GRAPHIC FUNCTION EXPORT OF DATAS AND GRAPHICS	.35 .37 .39 .41 .42 .44
TECHNICAL HELP	.52
INDEX	.53

### Introduction

### **Dokom CS**

Software for a stationary read out

DOKOM CS is a software solution that enables the readout of devices with an M-Bus interface. These devices are primarily consumption meters, e.g. water meters, calorimeters or electricity meters, which are available through an M-Bus protocol. The software can be used for the readout of individual M-Bus devices and due to its modular structure is also adaptable for M-Bus-installations with hundreds of M-Bus devices.

Meter readout with help of the scheduler

The program allows the user to automatically read data from the meters manually or with the help of a scheduler.Different types of readouts are available to the user, the aim being an automatic readout and the eventual export of the data in 14 different formats.

#### About this manual

This manual is arranged as follows:

- 1. General description of the system's components
- 2. Description of the program part configuration
- 3. Description of the program part reading
- 4. MRAPI Manager

### **System Requirements**

#### PC

To use the DOKOM CS software the following pc requirements are necessary

- Min. Pentium III System
- Microsoft Windows NT 4.0 (SP3), Windows XP, 2000 und NT.
- Regarding the systems NT, 2000 und XP you have to have administration rights
- Serial or PS/2 mouse
- Internet Explorer 4.01 oder higher
- Graphic adapter with 800 x 600 pixels and 256 colors
- 128 MByte RAM (typical 256 Mbyte) memory
- Harddisk with min. 30 MB free of space
- A parallel or usb interface for the dongle plug
- Min. 1 serial interface or 1 usb port (please use an usb to serial adapter)

Make sure that no application has access to the COM Port during DOKOM CS. Check for possible running applications in the background!

### Supported readout types

Central stationary readout

The datas of meters can be readout via different kinds. DOKOM CS supports the readout with help of a level converter. With this you can readout m-bus devices til more than many kilometres. As a wire you should take two shilded wires. Only one site of the installation has to be connected with the shild. The polarity of the wires is not important. Please use a wire with the recommended specification J-Y (st) Y 2 x 2 x 0,8mm.



## Decentral stationary readout

If it's not possible to install a pc in the near of the level converter, it can also be used a special m-bus modem for the data transfer. For this a pstn plug is needed. M-bus datas can also be transferred with help of the gsm net. For this you have to be sure that you have a good gsm level in the near of your level converter or m – bus datalogger.



### **Program structure**

### 3 program parts





#### DOKOM CS READING



The DOKOM CS configuration helps with the setup of the meter as well as with the entry of the necessary parameters of the communication group to prepare the readings. For test purposes it is possible already in this module to read from a communication group in the M-Bus unit. However, these readout data will not be saved. Later on in the configuration part, all the parameters can be adjusted, and then in the program part, with the required meter readings, a successful reading will be achieved.

The DOKOM CS reading is used for the installation of the readout task as well as for the automatic readout of the meter and the display of the data as an online graph. In addition can the readout data in this module be exported and later on processed. In this part of the program you can have a look at the different tables of the task where the current, as well as the historical, data of the readout can be found.

#### MRAPI MANAGER

![](_page_7_Picture_9.jpeg)

The MRAPI Manager is used for the management of the different drivers. Depending on which driver is selected, the data can be read out spontaneously, per cable, telephone or radio. It is not possible to save or interpret the measurement results. After a readout the user can simply print or export the readout results. The MRAPI Manager is used to call up a specific driver and a related spontaneous readout.

### Steps for installing the DOKOM CS Software

- 1. Switch on your pc
- 2. Put in the program cd in the cd drive
- 3. Execute the file CS3XXXINVWE.exe
- 4. Follow the instruction of the installation procedure
- 5. Now please plug in the dongle in the parallel or usb port

Generating a new<br/>program groupAfter the successful installation, the Setup Program will open a<br/>new program group with the name "DOKOM Collecting Station 3".<br/>Now both, the DOKOM CS as well as the Driver Manager<br/>(MRAPI), are loaded.

Installation an update To install an update it's necessary to remove the "old" version, unless you want to update from a 2.x.x.x version to a 3.x.x.x version, then you must keep the 2.x.x.x on your computer. If you have a 3.x.x.x version that is older than the 3.0.0.8, then you must do the following: go to Start  $\rightarrow$  Settings  $\rightarrow$  System Control  $\rightarrow$  Software. Now you can select the DOKOM CS32 entry to start to remove. Now follow the steps described above.

Removing DOKOM CS
From the Window's main menu select Start → Settings →
System Control → Software → Add/Remove. Before
removing from the list mark the corresponding program group
(Dokom CS) and then select Remove

Data protection. Data<br/>backup before a new<br/>installationWhen installing an update from a 2.x.x.x version to a 3.x.x.x<br/>version, a data backup of the 2.x.x.x must be carried out to be<br/>able to continue to work with the data in the 3.x.x.x version. The<br/>2.x.x.x version should **not** be removed from the computer!

## **DOKOM CS configuration**

### First steps for the configuration of the DOKOM CS

First call of the dokom cs configuration

![](_page_10_Picture_3.jpeg)

 New station extrant
 XI

 All meters in Division database are are fixed to the communication groups and they are fixed to the trations. Now you can add a new station has it's unspar name.

 Enter the name of a new collecting station has it's unspar name.

 Comm. groups will be added

 © Groups will be added.

 © I will add them and telup them

Instead of a red line, the red spots will show the necessary steps for setup.

Click on the **DOKOM CS CONFIGURATION** symbol on the Desktop to call up the configuration part of the DOKOM CS. After calling for the first time the DOKOM CS configuration, the name of a collecting station will be asked. After the creation of the collecting station a database is created in conjunction with it. Enter the name of the collecting station as shown on the screen.

The name should have a maximum of 8 characters. The name will be found again at the bottom of the program window after the configuration or the meter readout has been called up. Now the type of the meter added can be selected. The function suggested should be taken, so that afterwards, if the configuration needed is available, it can be chosen directly to begin the scan for the meter.

### Communication group selection for meter scan

![](_page_11_Picture_1.jpeg)

Choose now the right communication group from the system's desired configuration, so that the meter scan can begin. The DOKOM CS will show now a list of communication groups. One will rewrite the way of the readout of the meter (e.g. via modem, serial connection etc.). If the corresponding communication group is not listed, then close the window, and enter manually in the window Communication group, the new one with its specific data. Afterwards you can call up the **Wizard for the meter scan** and begin the scan.

![](_page_11_Picture_3.jpeg)

After choosing the right communication group, the window on the left appears. Press **Continue** and then **Start**. The scan for the meter will now begin with the help of the communication group selected. The found meters will be listed as shown on the window on the left.

![](_page_11_Picture_5.jpeg)

Readout datas of a spontan readout

Behind the rider communication group you can find the rider meter, which is where the meter that has been found is. By pressing **Start** on the meter readout, you can read already the selected meter. But, these data will not be saved! The Red Line (spots) will continue in the section Reading on page 35, where it will be described how a task can be set up from your readouts.

![](_page_12_Figure_0.jpeg)

DiOptions			<u>?</u> ×
_ <u>M</u> eters identification			
Name for <u>1</u> , identifier:	Name 1	C. Defendence 1	
Mask for 1. identifier:		<ul> <li>Preferred name i</li> </ul>	
Name for <u>2</u> , identifier:	Name 2	C Preferred name 2	
Mask for 2. identifier:			
Name for <u>3</u> . identifier:	Name 3	C Preferred name 3	
Mask for 3. identifier:			
P	ОК	Cancel Apply	
Mask for 2. identifier: Name for <u>3</u> . identifier: Mask for 3. identifier:	Name 3	C Preferred name 2 C Preferred name 3 Cancel	1

The individual meters can now be denominated and additional information can be entered in the individual rows. The preset identifiers here are: Name 1, Name 2, and Name 3. By clicking on the tool **Options**, your own identifiers can be selected for the description of the meter, as shown on the left. Also the highlighted identifiers can be selected. The specified identifiers will always be displayed on this window even when a data safety backup is made, where the identifiers are different. Consequently the identifiers have to be selected again.

#### View of the meter list

![](_page_12_Figure_4.jpeg)

In the opened window you can see again the column identifiers that have been entered. Every row of the meter should be in green if it is correctly configured. If they appear in red, then the meter must be configured again. See the next step: Configuration of a Meter

Up to this point the basic configuration is finished. Individual configuration examples for the corresponding drivers will be found in the following chapters. In addition, information over further functions will follow in the Configuration section.

If the configurations selected are correct, then go directly to the chapter DOKOM CS Meter Readout (Reading) where the necessary steps for the setup of a task etc. can be found !

### Structural layout of the DOKOM CS

<u> </u>											
File Edit V	.5 Configuration	on izardo Window I	Help								
S es				8 8, 8, 4	o 🐒 🙆						
Collecti	ng Stations										
tot of b		• - × e		<b>6</b> 0 E					#2		
		- * ^ <		· 🗉 🖙 🕶				_	+ 2 		
	Station ID: CI	.St.1						Created:			
	Name: Cl.	St1								allecting	
	Description:									onecting	
	Author								-	stations	
	Addition []								-	stations	
E Statio V	Name	Secription	Creat	ed Author							
DCLSE1	CLSt.1								-		
, 											
8 8 Commu	Inication Grou	ps									
_H4 ►	· ► + -	▲ < × ୯		"⊟ "., "\$   =?				#4 <u>Abo</u>	ut i		
	Name: Cr	n.Gr.1					✓ <u>R</u> ead	Count	COI	mmunicatic	n
	Description:										
	Driver	arial Milara						Comm. g	gro	aroups	
	Dirvei. [De	silarmibus		-1				Check c	on	3	
Name	Ø De:	scription D	river	Comm. group set	up Read			▲   <u> </u>			
Cm.Gr.1		5	erial-Mbus	COM3:2400, Sei	cond Yes			Miete	er <u>s</u> etup		
		s	enarmous	COM3.300, PIIII	alystes				trood		
Lommunica	ation groups M	eters						518	it jeau		
• Meters									- O ×		
	N (2)	1≜Laa. n– n	. 🔁 🗹 🗅	0 7 22 8	• A				# 8		
						مايين مام ا					
Meter 00	I ⊗ Nai M	mez 🍭 N	iamé 3	✓ Type Heat meter	Pril. addr. 001 (01H)	Meter setup     Wead     Ont (01H) Heat metr	Extended checking				
Meter 00	15			Water meter	007 (01H) 002 (02H)	002 (02H) Water me Yes	Inactive			motors	
Meter 00	16			Electricity meter	003 (03H)	003 (03H), Electricity Yes	Inactive			11101013	
Meter 00	17			Gas meter	004 (04H)	004 (04H), Gas mete Yes	Inactive				
Meter 00	18			Heat meter	001 (01H)	001 (01H), Heat met Yes	Inactive				
Meter 00	19			Water meter	002 (02H)	002 (02H), Water me Yes	Inactive		_		
1											
للكر											
						Actual station: Cl.St.2 - Cl.St.2					
🛃 Start 📗	12 🧟 🙆 1	🗿 판 💽 🚺 i	a 🖌 🛛 🗀	Deutsch	📃 ms_130	0_UK_dokcs 🔀 Dokom CS Co	onfigu 🦉 Unbenannt - Pa	int 🛛 🔍 🙆 👧 🤨	6:20		

#### Collecting collecting stations

In a Collecting station are saved the parameters as well as the Readout Data. A free selection of the name, e.g. name of the customer, readout location, task provider, is possible. It is recommended to create only one collecting station for the different tasks that are to be read within an active collecting station. Directly under it can be created the called Communication group.

A Communication group describes the way of communication of Communication a readout, e.g. via radio, level - converter, etc. Parameters are groups necessary here for the configuration. This is followed by the Meter Section

In the window Meters appears the corresponding filed meter. Meters Data like M-Bus Address, possible meter readout values as well as three optional names can be set by the user.

**Collecting stations** 

![](_page_14_Picture_1.jpeg)

![](_page_14_Picture_2.jpeg)

The name of the current Collecting station can be found at the bottom of the DOKOM CS software. A new set up will be called up using the Wizard. Select **Wizard -> New station wizard** to set up a new Collecting station. You will be guided through the different menus. In the first step you will be asked to give the name of the new collecting station. Then you can select a manual or automatic addition of the corresponding communication group. Finally there is also the possibility to scan for meters already connected. They will be inserted automatically in a table.

![](_page_14_Picture_4.jpeg)

**Communication groups** 

![](_page_14_Figure_6.jpeg)

If several collecting stations have already been applied, you can change between them. Go to the menu point **Tools**  $\rightarrow$  **Select station** or simply select the symbol. By clicking on the name of the collecting station to be called up, this will be selected. To check, the name of the selected collecting station should be at the bottom of the program window.

A Communication group describes the way of a readout. Here can be used the different drivers that support the different readout hardware. It is possible to make a selection from a number of drivers in the Communication group. A readout over an M-bus modem, a radio transceiver, a level - converter (serial driver) or a magnetic data coupler (serial driver) and many more are possible. Currently the DOKOM CS software supports the following drivers. In the table below it can be found an overview of the available drivers and their corresponding supported hardware.

#### Working with different drivers of the DOKOM CS

Supported driver	Supported hardware or purpose
M-Bus modem	For a readout with the help of an M-Bus modem, relay modem Zur
Serial driver	For a readout via a level converter, optical/inductive coupler
Modem Relay DL	For a readout of a Relay Data Logger via a modem
TCP / IP Relay DL	For a readout of a Relay Data Logger via a Network
Serial Relay DL	For a readout of a Relay Data Logger via a Serial Cable
Hand Track	For a readout from a Transponder via a Hand Track Transceiver
Simulation	For the creation of simulated values for presentation purposes

Setup and configuration of a communication group After the successful installation of a collecting station the communication groups can now be set up. If you used the Wizard for the set-up of the collecting station, then you have already configured eight communication groups. You can delete the ones that are not needed, or change the configuration from each single one at any time.

Setup a communication group If you used the Wizard to set up a new collecting station, then you have already eight communication groups at your disposal. If you want to enter a new communication group, go to Files → Communication groups. The communication group window will open. By pressing the key + a new communication group will be set up.

![](_page_16_Picture_0.jpeg)

After the communication group window appears you can enter the information for Communication group 2. Enter these in the fields Name and Description. Then select the wanted drivers. A number of drivers are available. The window looks like this:

Channel Setup			? ×
<u>S</u> erial port		COM3	•
Baud rate (bps)	D <u>e</u> tails	2400	•
MBus master initialization (DTR an	d 2 sec. delay)		
Meter request repeat		3	\$
Delay before meter readout (ms)		300	\$
Delay before repeated readout (ms	;)	3000	\$
Scanning meters methods O By primary addresses			
By secondary addresses			
[	ОК	Cano	el

![](_page_16_Picture_3.jpeg)

After selecting the drivers click on **Comm. group Set Up** for the parameterisation. There you must enter the corresponding parameter for the successful communication with the connected hardware.

Before you do this, the communication group entry is still in red. After the parameterisation the text colour changes to green. The communication group is now active. To make sure that the communication group is correctly configured, press on **Check Communication groups**. The following window appears after a successful parameterisation.

The window on the left shows that the communication group set up was successful. However, no meters have been set up. In the following chapters you will find the steps on how to add meters to a communication group. Because only then is the readout of a meter in a communication group possible. In the following chapters the support for the parameterisation of the different communication group can be found.

#### Meters

![](_page_17_Picture_1.jpeg)

Every type of meter that is added to the DOKOM CS must be configured for it to be read successfully. In the next chapters you will find the necessary steps for configuration, setup and change of the desired meters.

#### Adding and configuring of a meter

![](_page_17_Picture_4.jpeg)

#### Adding a meter manually

With the DOKOM CS software and help from the Wizard you can carry out a Meter Scan, where all the meters that have been configured under a corresponding communication group can be read. Click on **Wizard**  $\rightarrow$  scan meter wizard. A window appears with the communication groups that have been configured. Select the desired communication groups that are necessary to scan for the connected meter. This is followed by a window with the found meters. On the screen can be seen the found meters from a Meter Scan with a Simulation Driver.

Change first from the Communication group Rider to the Meter Rider. Now you are on the Meter window. Press the key + to add a new meter manually.

#### Changing a column identifier

DiOptions	<u>? ×</u>
Meters identification	
Name for <u>1</u> , identifier: Name 1	C. Bufundaria 1
Mask for 1. identifier:	Prefetted name 1
Name for <u>2</u> . identifier: Name 2	C Butward arms 2
Mask for 2. identifier:	
Name for <u>3</u> . identifier: Name 3	C. Brafarrad name 2
Mask for 3. identifier:	
	Cancel Apply
UK	Cancer Apply

You can give the meter three open choice names. The name identifier can be changed under **Tools**  $\rightarrow$  **Options**. After the input, the Identifier can be selected. Furthermore, the identifier can be highlighted so that it can stand out from the others. After the name is given, click on **Meter setup.** Here you must select from a list a Meter Type. Then the text from the meter description as well as from the communication group will change from red (inactive) to green (active). In the chapter Configuration you will find more information about this step. The following window should appear after pressing on **Check Communication groups** 

![](_page_18_Picture_1.jpeg)

For meters that have not been set up.

![](_page_18_Picture_3.jpeg)

For Meters that have been set up successfully. Now is the Communication group as well as the corresponding meters set up.

![](_page_18_Picture_5.jpeg)

If for installation reasons should a Communication group from an already set up task not be readable, click on the Menu point **Read** (the tick ( $\checkmark$ ) is now no longer visible), which is found behind the first entry field.

![](_page_18_Picture_7.jpeg)

Should only a single meter from a readout be inactive, click on the **Meter Rider** and then click on the Box **Read**, so that the tick ( $\checkmark$ ) is no longer visible.

#### User groups

![](_page_19_Picture_1.jpeg)

![](_page_19_Picture_2.jpeg)

With the help of this function the meters can be organized into groups. They can be grouped according to e.g. meter type, or place of installation. To set up a user group select first a name and a description of the group and then add the corresponding meters to the group (list). Later in a task, the meters of a user group can be activated directly, with a single click.

#### Selecting language

![](_page_19_Picture_5.jpeg)

![](_page_19_Picture_6.jpeg)

In the Menu point **Tools**, you can find the point **Language**. By clicking on it, the window with the available languages opens up.

#### Selecting a coulumn identifier in a table

![](_page_20_Picture_1.jpeg)

Show columns		? ×
✓ Name 1         ✓ Name 2         ✓ Name 3         ✓ Type         ✓ Pri. addr.         ✓ Meter setup         ✓ Read         ✓ Extended checkin	ıg	
Alignment C Left C Right C Center	Eont style C Normal C Bold C Italic C Bold italic	
ОК	Cancel	Apply

By clicking on the symbol that appears on the top left hand corner of a Table, the following window appears. Now you can select the meter value that you want to show on the list. Furthermore, the alignment and the style of the text can be changed. Use also Sort and Selection Spaces to change faster the order, the selecting and the deselecting of identifiers.

## Changing a driver in a communication group

Nam	Con Ge 4		0004-000	O Read	Story ave.
					Çovrim mitap
Descripto	C Smid-Mbut				Comm group prive
Nate 8	Descriptors	Dever	Comm. group onlug	Reat +	Opeck comm. group
Confect Confect		Savid Million Savid Million	CDH02430, Secondary scan	Yes	
Die Ge 2		Sendation	01.01.500 Hs	Yes	
Cm Gr.4	Printer of	SerielMbut	CDM1 2400, Pervay scan	Ves	
	and the second second	Driver charged The charge	i mult be recordinated? Al K's meters configuration of	All -	Extended function
	-	want to continue?			

In case that meters found in an M-Bus network are to be read with an M-Bus Modem instead of from an M-Bus level converter or the way of the readout has changed in any way, the corresponding driver of the Communication group has to be changed as well. You can select the new desired driver by clicking on the Menu point **Driver**. The change will be confirmed by clicking on the tick ( $\checkmark$ ). A message appears that asks if the communication group should be changed. Confirm with **Yes**. (See screen above)

• • •	H + - + / X	C 1 5:	n 15 17, 19 17	14	Boout driver
	Name: Cn.Gr.4			17 Beat	Çourler vehat
24	noplen				Comm group price
	Danie Jona Mous	Inim	10	1000	Check comm. group
n Gr 1 n Gr 2 n Gr 7 n Gr 4	a Unicogram	Serial Mour Serial Mour Serial Mour Serial Mour	Characel Gerlags 71 X Senal port 2014 - End role Speci Distant 2000 - Hilles name edistation (DTR and 2 enc. doing)	Yes Yes Yes Yes	Here yeld Dat yest for given weat
			Matter papart agent 1 3 3 Cather beine meter mather (inc) 200 \$ Cather beine meter mather (inc) 200 \$ Sources pather mather watch (inc) 200 \$ Sources pather mather (inc) 200 \$ Sources pather (i	-	Literaid function
1				لتر	

Informa	tion X
<b>(i</b> )	Checking result of communication group: Cm.Gr.4
~	All meters setuped.
	All (4) meters are active.
	ОК

It is important to know if all the properties of the meters found already in the communication group must be changed. To finish, the parameters of the communication group have to be adjusted. The text changes now from red to green. With this is the newly set driver active and ready for a new readout. After changing the driver a new meter scan can be made or it can continue working with the already selected meter list and its changed settings.

### Working with the map

#### Selecting a map

![](_page_22_Picture_2.jpeg)

Maps	
(4) アン・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	# 0
Name.	
name +	1

The DOKOM CS offers the possibility of using individual graphs or maps and then fixing the location of the meter at the end. In this way the user can get an overview of the meters installed in an area. Click under **File** on the symbol to open the window on the left. Now you can give the map a name and with the Plus Key add a Graphic File. The following Graphic Files are supported: CGF, SHP, DGN, BMP and JPG.

#### Adding meter in a map

![](_page_22_Picture_6.jpeg)

While in the map window, you can carry out the following functions with the described symbol. By clicking on the symbol on the left, meters from the current meter list can be placed on the map.

#### Removing meters in a map

![](_page_22_Picture_9.jpeg)

By clicking on the symbol on the left the placed meters can be removed once again from the map. You will find yourself then once again on the meter list and can with the help of the Add Function place them in another position. It is also possible to move the meters quickly from one place to another.

#### Zooming in and out of a map area

![](_page_23_Picture_1.jpeg)

Click on the **World** symbol to get a fitted version of the map. The arrow next to it allows the selection of the corresponding meter, so that changes (removing, moving, etc.) can be made. The other two functions help with the selection and then with the zooming in and out of the selected area.

#### Moving the map

![](_page_23_Picture_4.jpeg)

*Layer Function, Adding from Several Map Layers* 

![](_page_23_Picture_6.jpeg)

By clicking on the **Hand** symbol the map sections can be moved.

Certain graphic and map formats allow parts of areas to be imported, in this way different map layers can be shown or hidden, e.g. suburbs from a city map.

#### Recalling meter datas

![](_page_23_Picture_10.jpeg)

![](_page_23_Picture_11.jpeg)

The information of the meter can be recalled by clicking on the symbol on the left and then on the symbol of the meter. The communication groups the type of meter and the address will be displayed.

![](_page_23_Picture_13.jpeg)

#### Recalling meter details window

![](_page_24_Picture_1.jpeg)

Comm	Name: Cm.I Driver: Seri	p är.4 #Mbus	Active: Yes	
Moter	Name 1: Name 2: Name 3:	Meter 015	Active: Yes	
	Meter setup Ext. check:	004 (04H), Ga Inactive	meter, 4444444	
itabus deter :	status OK (no	enors).		
cnone	a readout>			
Cour	readout>		Value, unit	

Order of the window

![](_page_24_Picture_4.jpeg)

By clicking on this symbol the last readout data can be recalled as well as the properties of the meter that was last marked on the meter list. In addition, a picture e.g. from the position of the Meter or from the Meter itself, can also be saved to the meter. These can be carried out in the Rider Pictures. If a meter is not read out, then it is possible to generate a consumption value in the spare identification rider manually, e.g. to issue a receipt. This should only be allowed to authorised personnel.

The display of the meter details is possible in all parts of the program. Also in the tables is possible at any time for the file data to be shown with the help of the Function.

The symbol on the left is used to optimise the display of the windows.

### Working with the database

#### The database

![](_page_25_Picture_2.jpeg)

Structure of the database

After starting the program a new data base will be opened where the configuration and readout data can be saved. This is the highest level of the hierarchy in the structure. After the data base the DOKOM CS opens a collecting station. The name for this collecting station can be selected freely. The request to name the new collecting station will appear directly after the setup of a new data base. It can be entered there e.g. a location, the name of a customer, etc.

### Starting the database for the first time.

A data base will be automatically started after the first program call up. Dokom selects here a directory in the DOKOM CS installation directory. In the next point it can be read how to start a new data base and how to change to it.

#### How to call an existing database

et dal	tabase											x
ieate a	a new dal	abase us	ng									
ð	C En	pty datab	318									
<u>م</u>	<b>C</b> Da	abase cr	sation wi	zerd								
8	Op	en an exis	ting data	abase								
		_	_			 	_	_	_	_		
Other I	olders	C		C1	a						_	
Other I C \Pio	gramme\	Dakam D	dectina	Station :	3\data							
Other I C:VPio	olders gramme\	Dokom D	dectina	Station 1	3\data							
Other I	folders	Dakam D	liecting	Station 3	3 data							
Other I	olders gramme\	Dokom C	decting	Station 1	3\data							
Other I	olders	Dokom C	llecting.	Station 1	3 data							
Other I	olders gramme <sup>1</sup>	Jokom D	decting.	Station :	3-data							
Other I	olders	Jokom C	decling.	Station :	3 data							

If you plan to set up a new data base then select the following Functions: Click on **Tools** and then select the **Database**. The following window opens:

Here it is possible to select between the already set up databases. See the lower Menu point. For a new setup, click on the upper menu point to set up an empty (new) data base. After this selection the window below appears:

Select Directory	×
Directory Name:	
L:\Programme\Dokom Lollecting Station -	3
Directories:	<u>Files: (*.*)</u>
C \ Programme Dokom Collecting Station 3 Data Mrapi	dokomcsc32.exe dokomcsc32.mld dokomcsr32.log dokomcsr32.log dokomcsr32.mld dokomcsr32.mld
	Drives:
	🖃 c: []
	OK Cancel

Enter in the upper entry box a new directory. The following format must be followed. After writing the name of the directory enter: *New Name.* Then the Wizard will be started, without which the set up of a new collecting station is not possible. In the next chapter details can be found about how to work with a collecting station. After finishing the setup of a new collecting station it is possible to work using the new data base.

#### Backup actual Database

Backup actual database		<u>? x</u>
Backup directory: D:\		ß
	Backup	Cancel

In the Menu point **Tools**  $\rightarrow$  **Backup actual database** can be saved the content of the current data base in a desired directory. After clicking on the Menu point the following window appears to select the directory. Now the directory can be selected where the data base should be stored.

#### **Restoring Database**

Restore database from	backup	<u>?</u> ×
Backup <u>fi</u> le name:		
JI		<u>ě</u>
Restore to directory:		
D:\		<u>8</u>
	<u>R</u> estore	Cancel

If you want to open a saved database to read the meters in it, click on **Tools**  $\rightarrow$  **Restore Database**. The following window appears: Search for the directory where the wanted data base is found. Press **Open** and a new window opens. Select the directory (or enter a new one) in which the database is found that should be restored. Now the data is uploaded and a readout of the meters found in the database can be read.

#### Checking actual database

![](_page_27_Picture_1.jpeg)

In case there are problems during a readout from meters, it could be because of a faulty database. To check the current data base press on **Tools**  $\rightarrow$  **Check the actual Database**, the following window appears: should the check-up show failures then follow the instructions that appear at the end of the Check Report. In the window on the left can be seen the report of a successful data base check.

#### Maintain current database ( remove old – time records)

Anitain current database (remove old-time records) Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of da Delete meter readouts and meter events older then specified number of database (the specified number of database).	ų/s	
Delete meter readouts and meter events older then specified date		
	Defete	

#### Deleting single data entries

![](_page_27_Picture_6.jpeg)

When the amount of data in a data base becomes too large, you should not delete these data, but save it in the Data Backup, in case it may be needed at some other time. Click on the Menu point **Tools**  $\rightarrow$  **Options**  $\rightarrow$  **Maintain current Database** to delete the entries that are no longer needed. Select up to what date the old entries should be deleted or select the number of days from which the data should be deleted that is older than the number of given days.

In all the tables, except in the Table for Checking Readouts, the possibility exists to delete readout results. These can be removed by clicking on the readout result (highlighting) and then on the Minus symbol.

### Working with different drivers

Setup of different drivers

Name, description, as well as driver must be given to setup a communication group. After clicking on the Arrow Box of the Driver Box, all the available drivers will be shown. By clicking on the "-" key the given data will be deleted, by clicking on the "+" key they will be added and with the tick symbol saved. In the following sub-chapters you will find about how to configure the desired drivers in the communication group.

#### Serial M-Bus driver

![](_page_28_Picture_4.jpeg)

This Driver supports the communication with an M-Bus level converter. The level converter is connected to the PC via a serial cable. The Menu point Communication Set group up contains the parameters to fix the readout repetitions, the readout speed and the times for readout response. Under the Menu point Details, the parameters for a serial communication can be set. Parity, number of data bits, etc. are changeable here. The setup values are Experience Values and are necessary settings that should not be changed.

→ The prepared communication group is now active (the text is green)

#### M-Bus modem driver

Channel Setup					? ×
Phone number	0,0554531	2			
<u>S</u> erial port		COM1	-		
Baud rate (bps)		2400	•	D <u>e</u> tai	s
Modem	General		•	Det <u>a</u> i	s
Meter request repeat				3	\$
Delay before meter readout (ms	:)			300	\$
Delay before repeated readout	(ms)			3000	\$
Scanning meters methods By primary addresses					
C By secondary addresses					
		ОК		Cancel	

Serial port setur ? × Stop Bit Data bits 6 0 7 • 8 ○ 1.5 ○ 2 5 C <u>P</u>arity Data <u>F</u>low Control O No parity O Mark None  $\mathbf{O}$ Odd C Space C Hardware Even C XON/XOFF ОΚ Cancel

The M-Bus modem driver supports the communication with a special M-Bus modem. Here it is possible to enter in the window Settings, important parameters like the telephone number of the dialed modem, the interface used, as well as the Baud rate. In addition the number of the tried readouts and the time before and after the readout can be set here. In an M-Bus installation with several meters the time should be set to at least 300 ms, to make sure that all the meters respond.

On the Menu point **Baud rate**  $\rightarrow$  **Details** as in the serial M-Bus driver, it is possible to set the parameters of the driver for the transmission of start bits, stop bits etc. individually.

Modem Setup			<u>?</u> ×
Modem Initialization	ATE0^MATX1^M	Answer Time [ms]	4000 单
Dial <u>P</u> refix	ATDT	Dial Time [ms]	60000 🚖
Dial <u>S</u> uffix	^M	<u>R</u> edial Pause [ms]	2000 🚖
Hang up Command	+++^MATH0^M	Redial A <u>t</u> tempt	3 🔹
Connect Message	CONNECT	🔲 Different Modem Setup	
<u>N</u> o Connect	NO CARRIER	D <u>e</u> tails	
	NO DIALTONE		
	BUSY	]	
	ERROR		
		ОК	Cancel

Furthermore, on the Menu point Modem a detailed display in which the sequence order of the modem being set up can be fixed.

#### Modem-Relay DL

Channel Setup				<u>?</u> ×
Phone number		0,0554433	332	
<u>S</u> erial port			COM1	•
Baud rate (bps)		D <u>e</u> tails	9600	•
<u>M</u> odem	Det <u>a</u> ils	General		•
Passcode			000017	767
Meter request repeat			3	\$
Delay before meter readout (ms)			300	\$
Delay before repeated readout (	(ms)		3000	\$
Scanning meters methods				
C By secondary addresses				
		OK	Canc	el

For a readout from Relay M-Bus Data logger the following parameters are necessary for the selection of a modem. The telephone number, the COM port of the calling modem as well as the Baud rate have to be entered. Select 9600 Baud for the DR004DL and 57600 Baud for DR005/006DL data loggers. Then select the type of modem. The password for the data recorder should not be changed. The rest of the parameters should also not be changed.

#### Serial-Relay DL

Channel Setup			? ×
<u>S</u> erial port		COM1	•
Baud rate (bps)	D <u>e</u> tails	9600	•
Passcode		00001767	
Meter repeat		3	\$
Delay before meter readout (ms)		1000	•
Dejay before repeated readout (ms)		3000	\$
Scanning meters methods			
	OK	Cance	

For a direct serial readout, as well as for "normal" serial drivers, the parameters shown on the left have to be set. Note also here that the Baud rates for the DR004DL should be 9600 Baud and for the datalogger DR005/006DL 57600 Baud. Also here the password for the Datalogger is 00001767.

#### TCP/IP-Relay DL

![](_page_30_Figure_7.jpeg)

If the datalogger is to be read over a so called TCP/IP serial converter then the parameters here shown have to be set. Here is the IP address important, because it may be requested beforehand by the software delivered with the converter. If having readout problems the times can be changed under General Options.

#### Hand – Track driver

Channel Setup		<u>?</u> ×
Serial port	COM1 💌	
Baud rate (bps)	19200 💌	D <u>e</u> tails
Customer code	24	
Double readout		
	OK	Cancel

With the aid of this driver is possible the radio readout from M-Bus meters. The necessary Hand track (transceiver) must be connected to one of the PC's serial interfaces. For a successful communication the following parameters must be set: first the interface must be selected where the Hand track is connected. The Baud rate should be set to 19200 Baud. Depending on the transponder, the identification number must be entered. The identification number is the first two digits from the serial number of the transponder, e.g. 24. The current value of the M-Bus device will be transmitted after two readouts. Consequently, the option Double Readout should be selected.

#### Simulations driver

Channel Setup	? ×
Error rate (in %) - <u>m</u> eter error	3 🚖
Error rate (in %) - <u>r</u> eading error	<b>\$</b>
Simulated delay [ms]	500 🚖
OK	Cancel

With the help of a simulation is possible to carry out a readout without connecting a meter. As readout results will be generated meter values that lie within a specific value range. To activate the communication group you still have to enter the simulated Error Rate and the Cyclical Readout Time. These values can be entered in the corresponding boxes by pressing the option **Setup Communication groups** (See the window on the left).

To enter the values more easily, the arrow key should be used. The Error Rate should not be 100%; otherwise a graph cannot be displayed.

 $\rightarrow$  The set up Communication group is now active (the text is green).

### Supported meter types in different drivers

#### Meter of the m-bus and serial driver

ounters Setup			?)
Verzowe MRI 101/031 PolAGone 2 PolAGone 2 PolAGone 2 PolAGone 4 PolAGone 4 PolAGo	nt Co nt Co	Name ( a0TU ) 002U )	Jot V

By pressing the Menu point **Meter Settings** the window on the left appears. Now a meter type for the readout can be selected. If several meters have to be installed onto the Bus, the required primary M-bus address must be given. If the connected device does not have a primary address, then a secondary one can be fixed. This can be set by clicking on Secondary Address.

 $\rightarrow$  The set up meter is now active (the text is green).

Meter of the handtrack driver

If the Hand track driver has to be adjusted to the connected meter, there must be differences between the two types of transponders.

#### MiniBus transponder

![](_page_32_Picture_8.jpeg)

This type of transponder takes over the serial number of the connected M-Bus device (here MiniBus) e.g. an Encoder Register. The Meter name can also be selected here.

#### Impulse transponder

Einstellung Zähler	? ×
Iransponder Typ C Minibus C Impuls	
<u>S</u> eriennummer	1801108 💃
Zählername	Trans
<u>N</u> ame der Einheit	Volumen 💌
<u>E</u> inheit	m3 💌
<u>F</u> aktor	100,00
Anfangstand - Impulse	500 🄀
I <u>n</u> itialisierungswert	0,00
OK	Abbrechen

## The list of the suported meter of the DOKOM CS

With this type of transponder is necessary to enter the Initial Meter Impulse Stand of the transponder (Initial stand – impulses, are received when using a radio readout), as well as the Factor (the value of an impulse). So that the corresponding volume or the energy value can be calculated, is necessary that the accumulated meter stand of the readout values at the time the readout is entered (initialization value).

Now the meter impulses produced by the Reedimpulser of the stand of the meter can be reproduced and you get immediately after a readout the corresponding value (number and unit) of the Impulse Meter as readout result.

- A = Automatic baudrate detection
- P = programmable baudrate
- F = fixed baudrate

rec. Baudrate A/P/F Internetsite Meter name Meter type Cosmos ENCODER Water meter 300 F http://www.sensus.com 300/2400 А http://www.sensus.com Cosmos Hybrid Weter meter Cosmos Electronic Water meter 300/2400 А http://www.sensus.com F N/B 501 Calculator 300 http://www.sensus.com F PolluSonic 2 Heat calculator 300 http://www.sensus.com F PolluCom 2/M Heat calculator 300 http://www.sensus.com PolluDuo Calculator 300/2400 А http://www.sensus.com PolluStatE А http://www.sensus.com Ultrasonic meter 300/2400 PolluFlow Ultrasonic meter 300/2400 А http://www.sensus.com HRI Intelligent Impulser 300/2400 А http://www.sensus.com А Contagua Water meter 300/2400 http://www.sensus.com GWF Encoder F http://www.gwf.ch Water meter 300 FM2D/K 300/2400 А Frequency converter http://www.sensus.com Scampy Water meter 300/2400 А http://www.hydrometer.de А Calmex 300/2400 http://www.kamstrup.com Calculator F DZG S30 Electricity meter 300 http://www.dzg2.de Ρ EBZ-EDW Electricity meter 300/2400/9600 http://www.emh-meter.de Р NDWH Electricity meter 300/2400/9600 http://www.nzr.de PAD Pulse M1/2/4 Impulser 300/2400/9600 А http://www.relav.de Р Multicall III Calculator 300/2400 http://www.kamstrup.com F Multidata Zenner 2400 http://www.zenner.de Calculator Р ABB F2 Calculator 300/2400 http://www.abb.de WSD (L&G) Ultrasonic meter 300/2400 А http://www.landisgyr.com WSF (L&G) А Water meter 300/2400 http://www.landisgyr.com U1187/U1189 300/2400/9600 Ρ http://www.gmc-instruments.com Heat meter **Dialog WZ** Heat calculator 300/2400/9600 А http://www.nzr.de Ρ **CF50** Calculator 300/2400 http://www.schlumberger.com Qae 10 (Elster) 300/2400 А http://www.elstermesstechnik.com Gas meter

## **DOKOM CS Reading**

### Functions of the program part Reading

The program part<br/>readingThis section of the program contains all the functions necessary<br/>for the manual and automatic readout of different meters. The<br/>program section now uses the parameters which were set up in<br/>the configuration section.

In this part of the program the data from a readout will be automatically saved. Therefore when a readout is finished and then the program is closed, all the data will be saved in the data base.

The main function of the readout section of the DOKOM CS is the scheduler. In the next chapter its functions will be seen. The readout results will be written in the corresponding table after a readout and can also be seen in the configuration section if changed.

### The different types of readout

Automatic readout	To set up an automatic readout with the help of the scheduler, change from the Configuration Section to the Readout Section of the DOKOM CS software. Click on the symbol 2 and then on the symbol 2 to start the scheduler. The following forms of readouts are available.
Billing readouts	Every meter that is read out will be saved in the table and can thus later be read at any time.
Check readouts	Checks the communication with the connected meters. As a result is possible to see the corresponding table with the readout results of the last readout. Historical data will be overwritten.
User readouts	Offers the largest range of setting possibilities for a readout. It is able to read from one second up to a period of one year. The entire readout results will be logged. In this type of task is an online graph possible.
Eporting readout results	With this function is possible to export the table's readout results, but a table with readout data must already exist.
Special task	Special support from special types of PC (ATX), as well as an automatic data base backup.
User readout using datalogger features	Reading out the m-bus datalogger

### The scheduler

#### Settings of the scheduler

	Name:	Task		
	Description:			
Fask kind				
Billing readout				
C Check readout				
User readout				
Export readout result	ts			
Special task				
C User readout using r	lata logger features (ava	able only with some	channels)	

Press the **Alarm Clock** symbol on the top bar. Then click on the Menu point **New Task** from the scheduler. The window on the left appears. Now the different forms of tasks can be selected. In addition is possible to enter in two fields a description of the task. An exact description of the different types of tasks can be found in the next chapter.

![](_page_36_Figure_4.jpeg)

This is followed by the entry of the time period, from second by second up to yearly. See if it is possible (depending on the number of meters) to set low time periods. In case a meter does not respond, it is possible to set the number of the requests in the window Repeat Readout, maximum five. This way you know that the program has made every effort to read the meter.

![](_page_36_Figure_6.jpeg)

The next window shows an overview of the set configuration. In case some entries do not match, you can press **Back** to go to the previous Menu window. By pressing on **Close** is the configuration finished and leads to the next window.

<ul> <li>Name i</li> </ul>	Name 2	Name 3	Name 1	Name 2	Name 3
			Meter 004		
			Meter 005		
			Meter 006		
			Meter 007		
			Meter 012		
			Meter 013		
			Meter 014		
			Meter 015		

The readout meters are now ready to be added to the scheduler. If all the meters in a communication group are to be read, then click on the rider communication group and add them. All the meters will be shown on the left side of the window. The task will be sent to the scheduler window by clicking on OK and is ready to begin with the meter readout. A choice is possible by selecting the rider meter, communication group and user group.

V Name	Next run	Status	Schedule plan	Disable
📆 Task	06.08.2005	Idle	Kind: User readout,	Sion
				New task
				<u>R</u> emove task
				∐ask meters setup
				Task schedule setu
				Quick chart
				Readout progress

The newly setup task is now ready for readout. It can be started by pressing **Start**.

### The window of readouts

The readout window 裧

By clicking on **Readout Window** this window will be opened. In this window the user gets shown online the data from the read out M-Bus device before they appear in the

table. In the window of the Rider General Readout Results, the data of the expected sizes will be ordered and clearly listed. The unworked raw data will be listed in the window of the rider readout results in detail.

🗞 Readouts	_ 🗆 🗵
00 🖌	
Actual time: 05.08.2005, 08:17:55 Readout kind: User readout Readout name: Task Meter: Meter 007, Readout time: 05.08.2005, 08:17:54 Meter ID: 33333333 Number of counters: 3 Counter 1: $W = 73,92 \text{ kWh}$ Counter 1: $W = 73,92 \text{ kWh}$ Counter 3: $Wtrf1 = 67,9 \text{ kWh}$ 	Ĩ
Readout done: Task.	
Readout result - generally Readout result - in detail	

This data can contain extra information about the readout M-Bus device. By clicking on the **Pause** symbol on the upper left side the log can be stopped. The protocol can be restarted by pressing the button again. To the right of the Pause symbol is an **Eraser** symbol. Press this and the content of the window of both riders will be deleted.

#### The report window

![](_page_39_Picture_1.jpeg)

😨 Report	
DokomCS - station: Cl.St.1, 05.08.2005 08:18:57 Last report was published:	ŀ
14.07.2005 17:03.15: Application start - database path: C:\Programme\Dokom Collecting Station 3\data station 14.07.2005 18.09.33: Application stop 1.07.2005 19.09.32:	CLSt.1
14.07.2000 fb.03.33. 2007.2005 22:11:22: Application start - database path: C:\Programme\Dokom Collecting Station 3\data station 29.07.2005 22:17:27: Application stop 29.07.2005 22:17:27:	CLSt.1
U. B. 2005 (2003) 21 (1) 2003 21 (1) 20	ion: Cl.§
on 00-2000 10:57:57:06: Anwendungsstart: Datenbank-Pfad: C:\Programme\Dokom Collecting Station 3\data Stat 04.08.2005 16:04:45: Application stop 04.09.2005 16:04:45: Application stop	ion: Cl.S
04.08.2005 17:56:08: Application start - database path: C:\Programme\Dokom Collecting Station 3\data station 04.08.2005 17:59:16: Application stop 04.09.2005 17:59:16: Application stop	CLSt.2
5.0.2005 Dis 13.48. Application start - database path: C:\Programme\Dokom Collecting Station 3\Test station 05.08.2005 Dis 14.33. Application stop 05.09.2005 Dis 14.33.	CLSt.1
05.08.2005 08.15.54: Application start - database path: C:\Programme\Dokom Collecting Station 3\Test station 05.08.2005 08.15.54: Application start - database path: C:\Programme\Dokom Collecting Station 3\Test station	CLSt.1
Ongoing errors : 0	
Ongoing warnings : 0	
٩	
Save Print Acknoledge report	Close

In the report window you can see the logged process of a task. Furthermore you get information about errors or breaks in a readout. You can save and print the log. By pressing the button **Confirm Log** all the old logs will be deleted and a new recording will begin. After the DOKOM CS is working, the entries in the Log Window should not be deleted!!

### Changes of the readout tasks

Changes of the readout tasks To change current tasks, the corresponding task has to be marked in the scheduler list. The task will be interrupted by clicking on the key **Stop**.

![](_page_40_Figure_3.jpeg)

Then the meter set-up can be changed using **Task Meter Settings**. Under scheduler Settings is possible to change the parameters of the tasks. To activate the task you must press the key **Enable** again. It is also possible while the task is interrupted to call up online graphs and then to activate them. A task can be stopped at any time by pressing the key **Stop** and by pressing **Enable** and **Start** manually restarted.

### The graphic function

Online graphic

One of the special features of the DOKOM CS is the possibility to display readouts instantly in graphic format. If the corresponding readout procedure is marked then the Graphics key is enabled. The key is also enabled when the readout is cancelled. However, the current readout procedure is then also cancelled. A graphic display is only possible with a user readout. Make sure that the number of displayed values is as few as possible so that the graphic remains more clearly visible.

![](_page_41_Picture_3.jpeg)

After the Quick chart key is pressed, the graphic representation of

all the meters within the readout procedure is shown. The key M must be pressed so that the graphics are constantly actualised.

![](_page_41_Figure_6.jpeg)

#### Functions in the graphic windowr

![](_page_42_Figure_1.jpeg)

### **Export of datas and graphics**

*Automatically export of the* All the data from a readout, no matter what type, can be exported. *readout results* 

Data export

![](_page_43_Picture_3.jpeg)

To do this click of the symbol displayed. Tod are here supported
by an Wizard that will ask you to enter the type of readout. You
can load data fitting to that already saved in the graphic settings.

Export Wizard	<u>? ×</u>
Choose readouts to export data.	
Station: CI.St.1 - CI.St.1	
Billing readouts	
🧱 🔿 Check readouts	
🧱 🔿 Check readouts history	
📆 🔿 User readouts	
Load export definition from file	
Export description:	
	<u> </u>
	7
< <u>Previous</u> Ca	ncel

In the Menu point below you can see the possibility to load a graphic already saved. Select before hand the readout type with which you did the readout.

![](_page_43_Picture_7.jpeg)

Select now the corresponding procedure.

Export Wizard			<u>? ×</u>
Choose meters to export.			
Selected meters:	I ⊲ ⊳ ⊵ <u>A</u> ll meters	🗹 🗅 🙆 🖂	$\triangleleft \triangleright \bowtie$
■ Name 1	Type	1 😵 Name 2 😵 Name 3 🛞 007	> Type Electricity
	<		
	<b>_</b>		<b>_</b>
		< <u>P</u> revious <u>N</u> ext >	Cancel

Select the meters that you want to export. The selected meters will be shown on the window on the left.

Export Wizard	<u>? ×</u>
Choose meters to export.	
$\underline{S} \text{elected meters:}  \  \   \overline{S}$	> 19 🔂 🖬 meters:
🗉 Name 1 💲 Name 2 💲 Name 3 💲 Type	🛚 📕 🗐 Name 1 💲 Name 2 💲 Name 3 💲 Type 🔺
Meter 007 Elec	trici Meter 007 Electricity
4	
	<pre></pre>

Now select the time period of the defined data setup that you want to export.

![](_page_45_Picture_0.jpeg)

Select now the desired meter values of the meter, to prevent that the amount of data to be exported goes too high.

Export Wizard			<u>? x</u>
Sort by	Date, time:	<ul> <li>Ascending</li> <li>Descending</li> </ul>	
Then by	Name 2 Name 3 Meter ID	<ul> <li>Ascending</li> <li>Descending</li> </ul>	
Then by	W Wtrf1 Wtrf2	<ul> <li>Ascending</li> <li>Descending</li> </ul>	
		< Previous Nevt > 1	Cancel

Now the order of the identifiers and their grouping can be set up.

Export Wizard				<u>? ×</u>
Now it's finished. You file' definition for fur standard procedure.	ı can show export preview. You can also sı ther use. By pressing 'Finish' and export tab	ave export by pressir le will appear. This t	g 'Save expor able can be e	t definition to ported by
	Save export definition to f	ïle	]	
		< <u>P</u> revious	<u>F</u> inish	Cancel

Press now the symbol to save the settings. Press **Finish** to see the display of what was exported. Then the results of what was exported can be seen on the table underneath. From here, the transfer of the data can only be done using Excel, Word, etc. as described in the following section.

🔲 Readout Export Pre	view				_ 🗆 X
H 4 P PI 🛄 :	2i M 🐁 🕾 🖙 🚅 🖬	Ω			#1
Billing readouts from (	1.08.2005 to 31.08.2005				
🗉 Date, time	Name 1	Name 2	Name 3	Meter ID	W
▶ 05.08.2005 08:17:54	Meter 007			33333333	73,
•					F

#### Graphic export

![](_page_47_Picture_1.jpeg)

After a successful readout e.g. a user defined readout, (see screen above) a graphic will be generated on the basis of the readout values after a readout. Select here the **Graphic wizard**.

Chart Wizard	? X
Choose readouts to create chart from.	
Station: CLSt.1 - CLSt.1	
🗃 🙃 Billing readouts	
Load chart definition from file	
Chart description:	
	-
< <u>P</u> revious <u>N</u> ext >	Cancel

Select the readout type as shown on the window above.

Grafik Assistent					? ×
Ergebnisgr	afik ist nur nach einer b definierte Auslesung	enutzerdefinier <b>jen</b>	ten Auslesung d	arstellbar.	
🗉 Name	Beschreibung	Aktiv			<b>_</b>
Auftragsname		Nein			
					<b>T</b>
			2 Zurijak		Abbreaken
			< <u>∠</u> uruck		Abbrechen

Select now the readout that should be displayed graphically.

Chart Wizard		?
Choose meters to chart.		
Selected meters:	_ ⊡ < ► ► _ <u>A</u> ll meter	ns: 🖸 🗋 🚺 🗆 🗸 🕨 🛏
🗉 Name 1 🛛 💲 Name 2	🛞 Nam 🔺 🗉 Nam	ne 1 🔹 Name 2 🔹 Name 🔼
Meter 007	Mete	er 007
	<	
		<b>_</b>
		Þ
	< Previou	JS Next > Cancel

You have now the possible meters within the task available for Graphic display

Chart Wizard	<u>? ×</u>
L.B Choose counters. Billing readouts	
Selected meters:	🗹 🗅 🗹 🗅
■ Name 1 ● ● ◆ ▼i.ad● Meter setup         ▶ Meter 007         Electricity meter         003 (03H)         003 (03H)         Electricity meter         003 (03H)         Electricity meter         Image: State of the sta	
< Previous Next >	Cancel

Chart Wizard		<u>?</u> ×
Now it's finished. You	u can view your chart. You can also save chart definition for further use.	
	<u>S</u> ave chart definition to file Display <u>c</u> hart	
	< <u>Previous</u> <u>Next</u> Cano	el

Press **Save** to safeguard the settings. Press **Graphic** to see a preview of the graphic to be generated. A generated graphic can look as follows:

![](_page_49_Picture_2.jpeg)

#### MRAPI - Manager

![](_page_50_Picture_1.jpeg)

In the program group, besides the individual drivers and the two program sections, is also found the MRAPI Manager. With its help is possible to make fast and spontaneous readouts, without having to save the data in the data base. But the data can be exported in different formats. All the settings that are available in the program section of the DOKOM CS configuration can be run here as well. This is possible by pressing on the corresponding symbol. Instead of an Wizard to do a meter scan, a function for a direct meter scan is available.

8 E	1	-	1	×	8	-	¥	Þ (1	X	A 🗣	ŝ
1	2	34	5	6	7	8	9	10 1 <sup>.</sup>	1 12	13 14	15

The following functions in the MRAPI drivers are offered:

- 1. Readout
- 2. Readout (Logging function)
- 3. Meter Settings
- 4. Meter Value Settings
- 5. Settings of the Names of the Units
- 6. Meter Scan
- 7. No Function
- 8. Special Function for Cosmos Hybrid
- 9. No Function
- 10. Copy Readout Results
- 11. No function
- 12. Delete Readout Results
- 13. Print Readout Results
- 14. Export Readout Results
- 15. Version Number and Manufacturer

### **Technical help**

![](_page_51_Picture_1.jpeg)

	If you need technical assistance please contact the following specialist.				
city	name	phone	e - Mail		
Paderborn	Andreas Papenheim	+49 5251 17670	ap@relay.de		

### INDEX

3 program parts	.8
About this manual	.4
Adding a meter manually	19
Adding and configuring of a meter	19
Adding meter in a map	25
Automatic readout	41
Automatically export of the readout	
results	50
Billing readouts	41
Central stationary readout	.6
changes of the readout tasks	46
Changing a column identifier	19
Changing a driver in a channel	23
Changing of the column identifiers	13
Channel selection for meter scan	12
Channels15,	16
Check readouts	41
Checking the database	31
Data protection. Data backup before	а
new installation	10
Decentral stationary readout	.7
Deleting single data entries	31
Description of the program part	
configuration	.4
Description of the program part	
reading	.4
DOKOM CS configuration	11
DOKOM CS CONFIGURATION	.8
DOKOM CS Reading	39
DOKOM CS READING	.8
Eporting readout results	41
First call of the dokom cs configuration	n
	11
First steps for the configuration of the	÷
DOKOM CS	11
General description of the system's	
components	.4
Generating a new program group	10
Graphic export	54
Hand – Track driver	36
Impulse transponder	38
Installation an update	10

Layer Function, Adding from Severa	
M Pue moder driver	.20 22
Motor of the headtrack driver	.33 70
Motor of the manufack unver	.37 27
Motoro	.37 10
MiniPue transponder	19
Modom Bolov DI	.37 25
Moving the map	.30 20
MPADI Managar	.20 1
	4 0
Online graphic	0 17
Order of the window	.47 97
PC requirements	. בו ה
Program structure	נ מ
Readout datas of a spontan readout	0
Recalling data details of a meter	27
Recalling meter datas	26
Removing meters in a man	.20
Removing DOKOM CS	10
Restoring the current database	30
Saving the current database	30
Selecting a coulumn identifier in a	.00
table	22
Selecting a map	24
Selecting language	21
Serial M-Bus driver	.32
Serial-Relay DI	35
Service of the current database	.31
Settings of the scheduler	.42
Setup a channel	.17
Setup of different drivers	.32
Simulations driver	.36
Special task	.41
Starting the database for the first tim	е
	.28
Stations15,	16
Steps for installing the DOKOM CS	
Software	9
Structural layout of the DOKOM CS.	.14
Structure of the database	~~
	.28
Supported driver	.28 .17

Supported meter types in different	
drivers	.37
Supported readout types	6
System Requirements	5
TCP/IP-Relay DL	.35
Technical help	.58
The database	.28
The different types of readout	.41
The list of the suported meter of the	
DOKOM CS	.38
The readout window	.44
The report window	.45

The scheduler	42
User groups	21
User readout using data logger	
features	41
User readouts	41
View of the meter list	13
Working wih different drivers of the	
DOKOM CS	17
Working with different drivers	32
Working with the database	28
Working with the map	24
Zooming in and out of a map area	26